



Programming Kyocera's Smartphone

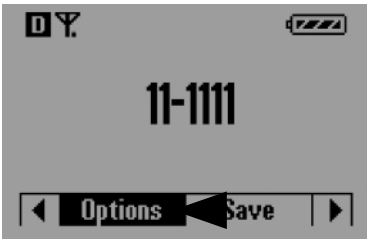


1. Insert the battery in the cradle and charge it for approximately 30 minutes.
2. With the flip closed, turn on the phone by pressing the Power key for approximately 3 seconds.
3. Press "1" six times. Press the shuttle in to select "Options."

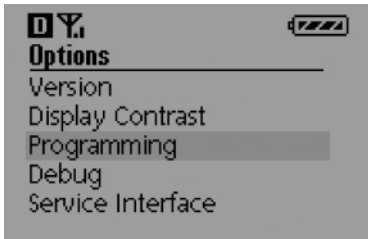

4. Scroll the shuttle down to highlight "Programming." Press the shuttle in to select. A message will appear that instructs you to open the flip to continue.




5. Use the keypad to enter the security code (six zeros). Tap "OK."

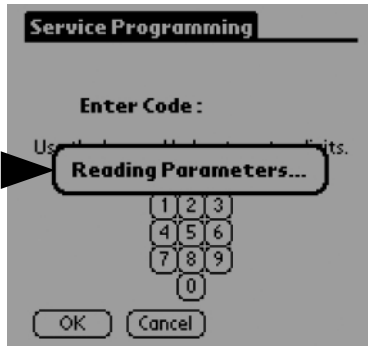

6. Wait for the parameters to be read.



7. Tap "More" for additional programming.

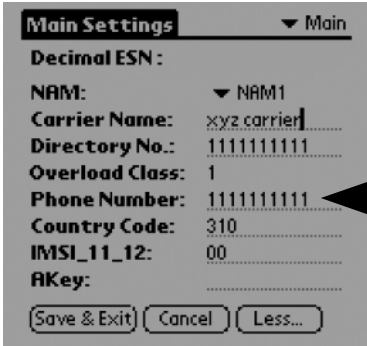

8. After the parameters are read, use the stylus to select the desired NAM, entering a phone number and other relevant information.



9. Tap "Save and Exit."